



5.10 Operating the sliding tables (Option)

General

As an option, one or more sliding tables can be mounted on the center-beams (telescope beams) of the MultiMAX 3+3. The sliding tables can be shifted on the center-beams (telescope beams) to match the desired position.



The sliding tables are designed in such a way, that they can be used at the telescope beams 1, 2 or 3 of the MultiMAX 3+3.



Adapters

Depending on the desired mounting position of the sliding table (telescope beam 1, 2, or 3), adapters have to be used to fit the sliding table to the outer dimensions of the MultiMAX 3+3 telescope-beams.

	Sliding table large / small on telescope 1	Sliding table large / small on telescope 2	Sliding table large / small on telescope 3
ADAPTER	YES	NO	NO




The use of the sliding tables without the suitable adapters (if required) is not allowed.

- Risk of damage
- Risk of accident
- Risk of injury



Mounting of the sliding tables

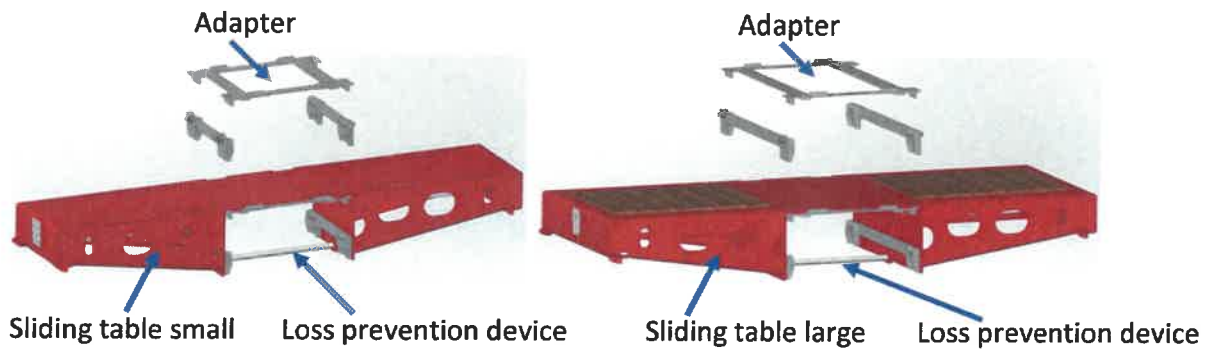

To mount a sliding table on the "telescope 1" of MultiMAX 3+3:

- Remove loss-prevention-device.
- Lift sliding table on center-beam of MultiMAX 3+3.
- Insert the 3-part adapter-set between telescope 1 and sliding table.
- Re-install and secure loss-prevention device.
- Manually shift the sliding table to the desired position.

To mount a sliding table on the "telescope 2 or 3" of MultiMAX 3+3:

- Remove loss-prevention-device.
- Lift sliding table on center-beam of MultiMAX 3+3.
- Re-install and secure loss-prevention device.
- Manually shift the sliding table to the desired position.

Empty drive

Remove sliding table(s) from MultiMAX 3+3

OR

secure sliding table(s) against unintended movements by suitable means.